

## Connect your equipment to the cloud



Install and set up the Data Acquisition Unit included in this box Remember to insert the SIM card (flip for more)



Go to **deif.com/insight** and use the quick start guide to finalise the installation



Once done, you're all ready to react on the real-time data from all units, no matter where they are.

Dathboard	(BITICAL ALARM)	POWER	LEGATION	st to			
E Piets	0		1		•	Ter ser 1	4
Ca una	Alarmi / Sthr	536.4 KW	1	LANS			2
E Reors		786. 			F	-	
	423 V 66 3		HITIFEATONI				
100 C	420 V	66%	D/TE +		VALIS	1011017	
	BENERATON PEACS		01.95.24 05/89 2011	voltage L1 C2 above trigger	57	ents.	
	Punning 150		01/2014 03/84/2011	Power Below Sigger	2.4	a.n	
	Total p 316		14.01.93 00/89.2011	Current L1 value tripper	100		
	Contes		11.2634	Duiter/L1 Below ligger	120		
CC 165.684887	atah ren	ariti	01.31.27	Pover	210		

## deif.com/insight

Access Insight –
Quick start guide & documentation –

## How to install the SIM card

- 1. Use a Phillips screwdriver to remove the cover
- 2. Make sure the SIM card contacts face up
- Gently slide the SIM card into the slot until it clicks into place.

To remove a SIM card, press the SIM card in, and release it. Gently grip the SIM card and pull it out.



For additional support, go to **deif.com/support** 



+45 9614 9600 (24/7) Local office details: deif.com/support/local-office



support@deif.com

DEIF A/S Frisenborgvej 33 7800 Skive, Denmark Tel. +45 9614 9614

